



Excerpt from The WIS with Comments for Trunk lid Light bar removal

Callout	Component Name	
	Rear Compartment Lid Latch Cover	
N	Note	
	1 Use a small flat-bladed tool to pull and release the rear compartment lid latch cover.	

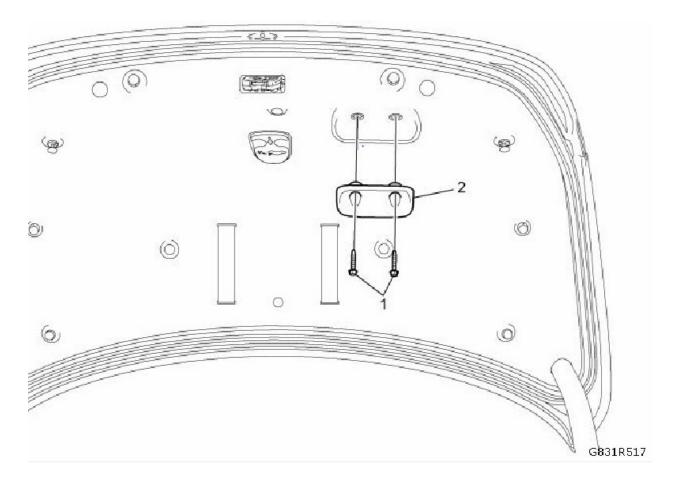

Callout	Component Name	
1	Rear Compartment Lid Inside Handle Fastener (Qty: 2) Refer to <u>Fastener Caution</u> .	
2	Rear Compartment Lid Inside Handle	

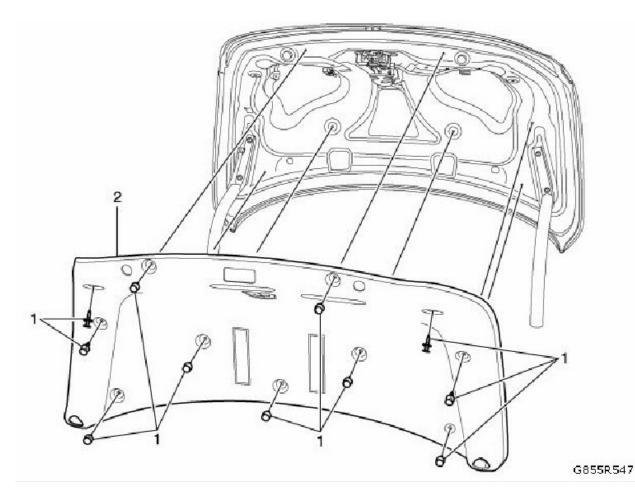

1. Remove the pop rivets from the trunk lid liner with a flat head screwdriver




Figure 1: Pop Rivets

- a. The pop rivets are in 2 pieces. Remove the cap and the base carefully as you will need them to reassemble
- 2. The liner should drop down after they are all removed
- 3. Remove the tape from the trunk lid liner near the hinges
- 4. Remove the emergency trunk release handle form the liner by pulling it through the slot




Figure 2: Trunk Emergency Trunk Release Slot

5. The liner should come right off with ease

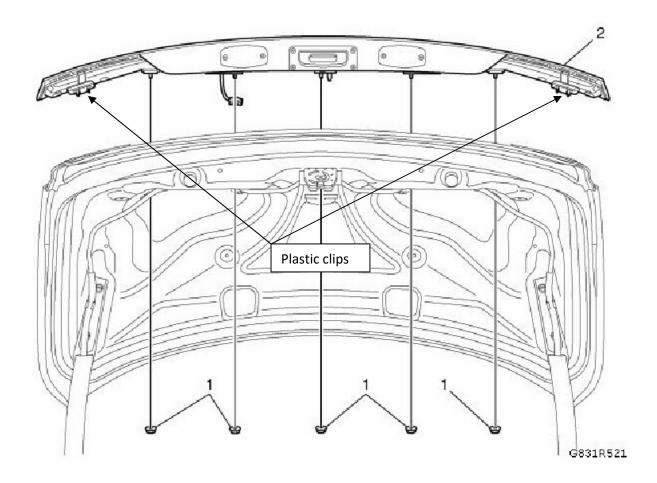


Callout	Component Name	
Preliminar	y Procedure	
Remove rea Replacemen	er compartment lid inner panel trim. Refer to j <u>nt</u> .	Rear Compartment Lid Inner Panel Trim
	Rear Compartment Lid Outside Handle Fast	ener (Qty: 5)
	Refer to Fastener Caution.	
1	Tighten	
	9 Nm (80 lb in)	There are 2 plastic retaining clips (one at each end of the light bar) they are not easy to see
	Rear Compartment Lid Outside Handle	use 90 deg needle nose pliers to
	Procedure	compress the plastic retaining lip and gently pull the end of the light bar out.
2 2		(link below)
a. 3.		get the connector off. I used a screwdriver to help

https://www.amazon.com/TEKTON-34233-7-Inch-90-Degree-Pliers/dp/B00YQ7RS1M/ref=sr 1 fkmr1 2?ie=UTF8&qid=1481600324 &sr=8-2-fkmr1&keywords=90+deg+needle+nose+pliers

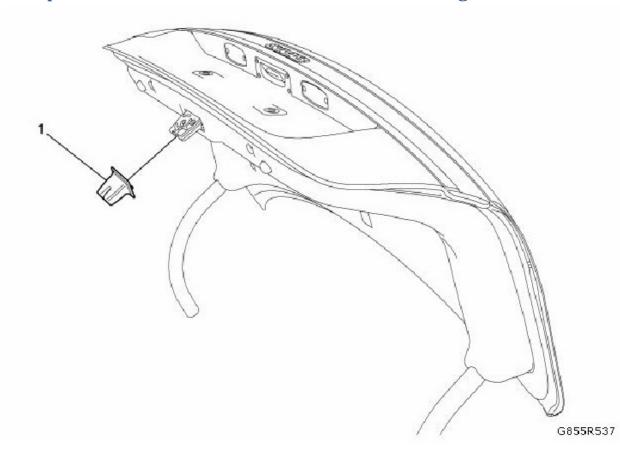


Excerpt from The WIS with Comments for Trunk lid Light bar removal

Callout	Component Name	
	Rear Compartment Lid Latch Cover	
N	Note	
	1 Use a small flat-bladed tool to pull and release the rear compartment lid latch cover.	

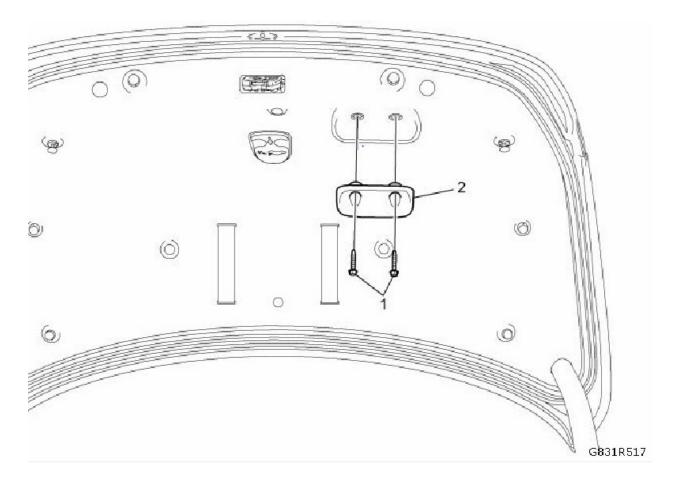

Callout	Component Name	
1	Rear Compartment Lid Inside Handle Fastener (Qty: 2) Refer to <u>Fastener Caution</u> .	
2	Rear Compartment Lid Inside Handle	

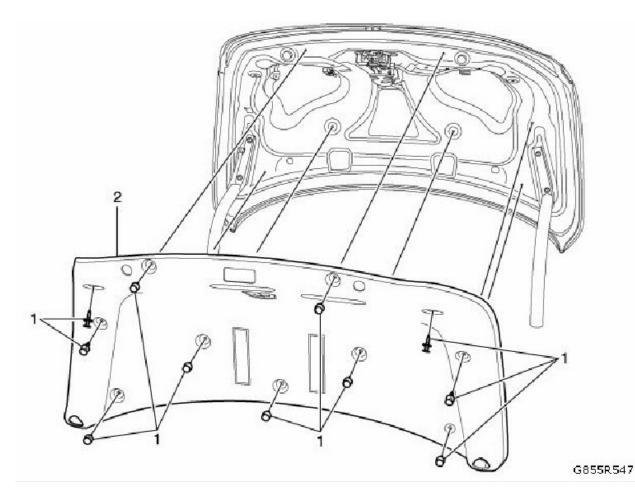

1. Remove the pop rivets from the trunk lid liner with a flat head screwdriver




Figure 1: Pop Rivets

- a. The pop rivets are in 2 pieces. Remove the cap and the base carefully as you will need them to reassemble
- 2. The liner should drop down after they are all removed
- 3. Remove the tape from the trunk lid liner near the hinges
- 4. Remove the emergency trunk release handle form the liner by pulling it through the slot



Figure 2: Trunk Emergency Trunk Release Slot

5. The liner should come right off with ease

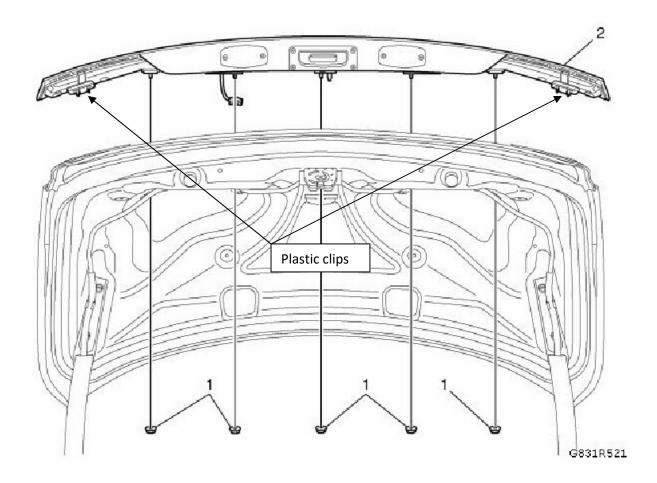

Callout	Component Name	
Preliminar	y Procedure	
Remove rea Replacemen	er compartment lid inner panel trim. Refer to j <u>nt</u> .	Rear Compartment Lid Inner Panel Trim
	Rear Compartment Lid Outside Handle Fast	ener (Qty: 5)
	Refer to Fastener Caution.	
1	Tighten	
	9 Nm (80 lb in)	There are 2 plastic retaining clips (one at each end of the light bar) they are not easy to see
	Rear Compartment Lid Outside Handle	use 90 deg needle nose pliers to
-	Procedure	compress the plastic retaining lip and gently pull the end of the light bar out.
2 2		(link below)
a. 3.		get the connector off. I used a screwdriver to help

https://www.amazon.com/TEKTON-34233-7-Inch-90-Degree-Pliers/dp/B00YQ7RS1M/ref=sr 1 fkmr1 2?ie=UTF8&qid=1481600324 &sr=8-2-fkmr1&keywords=90+deg+needle+nose+pliers